

Operating Instructions

METTLER
Analytical balances

AE50 55 g/0,1 mg

AE100 109 g/0,1 mg

AE200 205 g/0,1 mg




METTLER TOLEDO

Leveling the balance	Calibrating the balance AE50: 50.0000 g AE100: AE200: 100.0000 g	Integration time Steps 1/2/3	Stability detector Steps 1/2/off	Taring; weighing Ranges: AE50 0...55 g AE100 0...109 g AE200 0...205 g
		<img alt="Diagram		


METTLER AE50/100/200

Operating elements and connections

- 1 Brief Operating Instructions
- 2 Single control bar
- 3 Level indicator
- 4 Calibration lever
- 5 Weighing pan/windshield ring
- 6 Leveling screw

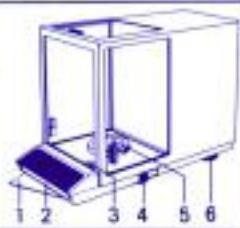

- 10 Voltage selector
- 11 Microfuse
- 12 Power-line connection socket
- 13 Socket for handkey/foot pedal

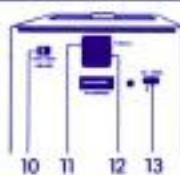

Preliminary steps

Checking the operating voltage

The operating voltage setting must agree with your local power-line voltage; please check this setting and, if needed, change it.

Admissible power-line voltage in the switch positions
115 V: 92 V...132 V
220 V: 184 V...265 V

Location

- A stable location; as free from vibration as possible.
- Make sure there are no large temperature fluctuations.
- Avoid direct sunlight and drafts.
- Connect the power cable at the work station.

Installing the weighing pan; leveling the balance

- Place weighing pan on balance; the conical peg centers the pan in the opening in the base of the weighing chamber.
- The two leveling screws should be adjusted so that the bubble is in the middle of the circle.

Whenever the location of the balance is changed, the balance should be re leveled.

Operation

Brief Operating Instructions

Brief Operating Instructions can be found on a card that swings out from underneath the balance housing.

Switching the display on/off

- Briefly press the single control bar; all display segments light up for several seconds:

8.8.8.8.8.8.8.

- Afterwards, the display automatically sets itself to zero.
- Lightly lift the control bar; the display is switched off.

Calibration

Make absolutely sure:

- The balance must be left connected to the power supply for at least 60 minutes before "calibrating".
- Press and hold the single control bar until "CAL" appears in the display, then release control bar. The display changes to CAL---, then to CAL 100 (blinks). AE50: CAL0 blinks.
- Move calibration lever all the way to the rear; the display changes to CAL---, followed by 100.0000 (AE50: 50.0000), then to CAL 0 (blinks).
- Move calibration lever all the way back towards the front of the balance; the display changes to ---, followed by zero.

Measuring cycle/measuring accuracy

By selecting a particular integration cycle, as well as a particular stability detection step, the balance can be configured according to your weighing location and needs.

Integration time:

- Step 1: Used for very stable, vibration-free weighing table (short measuring cycle).
- Step 2: Normal setting.
- Step 3: Used for unfavorable ambient conditions (long measuring cycle).
- Press the control bar and hold it until "Int" appears in the display, then release the control bar.
- Immediately press the control bar briefly; the display will change to the next step.
- Stop at the step you wish to use and wait for the display to return to the weighing mode (zero).

Stability detector:

- Step 1: Great sensitivity (long pause before data are released).
- Step 2: Less sensitivity (short pause before data are released).
- Normal setting
- Step: The stability detector is switched off. Please note off that when this is the case, the filling guide (DeltaDisplay) is also switched off (described in Paragraph entitled, "Weighing-in").
- Press the control bar and hold until "ASd" appears in the display, then release control bar.
- Immediately press control bar again briefly; the display changes to the next step.
- Stop at the step you wish to use and wait for the display to return to the weighing mode (zero).

Note: After selecting the integration time, you can go directly to the selection of the stability detector setting by holding the control bar down.

Taring

- Open the sliding glass door.
- Place a tare container on the weighing pan.
- Close the sliding glass door.
- Press the control bar briefly; the display changes to zero.

The weight of the container is now tared out. To weigh in, the balance weighing range minus the weight of the tare container - is now available.

Note: It is possible to carry out external taring by using the handkey or foot pedal from the "ACCESSORIES, optional" (connection sockets on rear of balance).

Weighing-in

- Open the sliding glass door.
- Fill in substance up to the desired target weight (to read the weight accurately, the door must be closed).

If different components are to be weighed, one after the other, into the same container, it is possible to tare after each weighing and start the next weighing from zero. This can be done until the tare container and all the components together reach the end of the weighing range.

Filling guide (DeltaDisplay)



The filling guide (DeltaDisplay) switches on automatically when weighing in substances quickly; the last two digits are blanked out and the display change sequence speeds up. This allows the increase in weight to be followed better. When weighing in slowly towards the target weight, the two digits switch back on.

The display change sequence remains rapid. Only when weight changes are very small does the balance switch back to the normal display change with the full number of decimal places.

Stability detector:


When stability is achieved (determined by the step selected for the stability detector), the green dot in the display goes out.

The result is then stable.

Note: When the green dot lights up in the display, the data interface is blocked; when the green dot goes out (stability), the data interface is unblocked.

Further capabilities

- 20 Cover
- 21 Screw
- 22 Hook

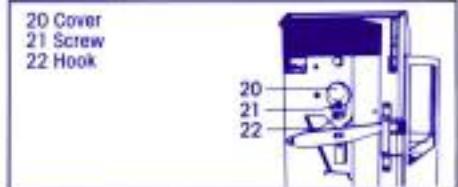

GD hanger (for weighing below the balance)

- Open all sliding glass doors.
- Remove the weighing pan. Disconnect power cable.
- Place the balance on its back.
- Loosen the screw on the bottom of the balance.
- Swing the cover to one side.
- Retighten the screw.

A hook is visible in the opening; the object or substance can be weighed by attaching a hanger from this hook.

- Place the balance back on its feet, place the weighing pan back on and level the balance. Plug in power cable.
- With the hanger attached to the hook, press tare.

Note: The weighing pan does not have to be placed back on if the hanger is at least as heavy as the pan. The hanger is not available from METTLER!

Care and maintenance

Cleaning

A cloth with some soapy water is sufficient to clean the weighing pan and housing. Do not use any strong solvents. To remove residues from the weighing chamber, use the small artist's brush that is included in the balance standard equipment (do not blow air through the chamber).

Replacing the microfuse

- Disconnect the power cable.
- Turn out the fuse holder (in the power-line connection socket) with a screwdriver.
- Replace the fuse (spare fuse 160 mA slow blow in the fuse holder).
- Place the fuse holder back on.
- Plug the power-line cable back in.

Accessories

Optional equipment	Order No.
Draft shield cylinder, can be stocked: 1 unit	38594
Tweezers, 210 mm long (with plastic tips)	70209
Density (specific gravity) determination kit	40290
Foot pedal	46278
Handkey	42500
Microfuses, 160 mA slow-blowing (set of 3)	55144
Data interfaces:	
011 Option - CL/RS232C unidirectional	38750
012 Option - CL/RS232C bidirectional	38751
013 Option - IEEE488	38752
040 Data Output (unidirectional mode)	38795

Standard equipment

Power-line cable	neutral	87578
	Switzerland	87920
	Euro-Norm	87925
	USA	88668
Centering disk (for draft shield cylinder)		38609
Weighing pan, 80 mm dia.		38590
Hair-bristle brush		70114
Windshield ring		38689

Specifications

	AE50	AE100	AE200
Readability	0.1 mg	0.1 mg	0.1 mg
Weighing range	0...55 g	0...109 g	0...205 g
Tare range (subtractive)	0...55 g	0...109 g	0...205 g
Reproducibility (standard deviation)	0.1 mg	0.1 mg	0.1 mg
Linearity	±0.2 mg	±0.2 mg	±0.3 mg
Linearity relative to 10 g	±0.1 mg	±0.1 mg	±0.1 mg
Stabilization time (typically)	5 sec		
Integration time (adjustable)	1.5/3/6 sec		
Display sequence - Mettler DeltaDisplay off	0.4 sec		
- Mettler DeltaDisplay on	0.2/0.4 sec		
Stability detector			
- Sensitivity selectable in three steps	1/2/off		
Sensitivity drift (10...30°C)	±2 x 10 ⁻⁶ /°C		
Calibration weight (built-in), adjusted to an apparent mass of 8.0 g/cm ³ in an air density of 1200 mg/l	100 g, adjusted to ±0.1 mg (50 g, adjusted to ±0.1 mg for AE50)		
Dimensions:	Weighting pan Open space above weighing pan Balance housing (W x D x H) Net weight	80 mm dia. 215 mm 205 x 410 x 290 mm 10.3 kg	
Power supply:	Voltage, adjustable Admissible voltage range Frequency Power consumption	115 V, 220 V 92...132 V, 184...265 V 50...60 Hz 10 VA	
Admissible ambient conditions during operation:			
Temperature	10...40°C		
Relative humidity (non-condensing)	25...85%		

What's wrong if...

- ... the entire display does not light up?
- ... the OFF display appears?
- ... only the upper horizontal segments light up in the display?
- ... only the lower horizontal segments light up in the display?
- ... the weighing result is unstable?
- ... the weighing result is obviously incorrect?
- ... only a portion of the display lights up?
- ... the middle horizontal segments in the display are blinking (for more than 30 sec)?
- ... CAL Err appears in the display?
- ... no CAL appears in the display?
- ... a zero display does not appear after pressing tare?
- ... the entire display does not light up?
- ... the OFF display appears?
- ... only the upper horizontal segments light up in the display?
- ... only the lower horizontal segments light up in the display?
- ... the weighing result is unstable?
- ... the weighing result is obviously incorrect?
- ... only a portion of the display lights up?
- ... the middle horizontal segments in the display are blinking (for more than 30 sec)?
- ... CAL Err appears in the display?
- ... no CAL appears in the display?
- ... a zero display does not appear after pressing tare?
- ... the entire display does not light up?
- ... the OFF display appears?
- ... only the upper horizontal segments light up in the display?
- ... only the lower horizontal segments light up in the display?
- ... the weighing result is unstable?
- ... the weighing result is obviously incorrect?
- ... only a portion of the display lights up?
- ... the middle horizontal segments in the display are blinking (for more than 30 sec)?
- ... CAL Err appears in the display?
- ... no CAL appears in the display?
- ... a zero display does not appear after pressing tare?
- ... the entire display does not light up?
- ... the OFF display appears?
- ... only the upper horizontal segments light up in the display?
- ... only the lower horizontal segments light up in the display?
- ... the weighing result is unstable?
- ... the weighing result is obviously incorrect?
- ... only a portion of the display lights up?
- ... the middle horizontal segments in the display are blinking (for more than 30 sec)?
- ... CAL Err appears in the display?
- ... no CAL appears in the display?
- ... a zero display does not appear after pressing tare?
- ... the entire display does not light up?
- ... the OFF display appears?
- ... only the upper horizontal segments light up in the display?
- ... only the lower horizontal segments light up in the display?
- ... the weighing result is unstable?
- ... the weighing result is obviously incorrect?
- ... only a portion of the display lights up?
- ... the middle horizontal segments in the display are blinking (for more than 30 sec)?
- ... CAL Err appears in the display?
- ... no CAL appears in the display?
- ... a zero display does not appear after pressing tare?
- ... the entire display does not light up?
- ... the OFF display appears?
- ... only the upper horizontal segments light up in the display?
- ... only the lower horizontal segments light up in the display?
- ... the weighing result is unstable?
- ... the weighing result is obviously incorrect?
- ... only a portion of the display lights up?
- ... the middle horizontal segments in the display are blinking (for more than 30 sec)?
- ... CAL Err appears in the display?
- ... no CAL appears in the display?
- ... a zero display does not appear after pressing tare?
- ... the entire display does not light up?
- ... the OFF display appears?
- ... only the upper horizontal segments light up in the display?
- ... only the lower horizontal segments light up in the display?
- ... the weighing result is unstable?
- ... the weighing result is obviously incorrect?
- ... only a portion of the display lights up?
- ... the middle horizontal segments in the display are blinking (for more than 30 sec)?
- ... CAL Err appears in the display?
- ... no CAL appears in the display?
- ... a zero display does not appear after pressing tare?
- ... the entire display does not light up?
- ... the OFF display appears?
- ... only the upper horizontal segments light up in the display?
- ... only the lower horizontal segments light up in the display?
- ... the weighing result is unstable?
- ... the weighing result is obviously incorrect?
- ... only a portion of the display lights up?
- ... the middle horizontal segments in the display are blinking (for more than 30 sec)?
- ... CAL Err appears in the display?
- ... no CAL appears in the display?
- ... a zero display does not appear after pressing tare?
- ... the entire display does not light up?
- ... the OFF display appears?
- ... only the upper horizontal segments light up in the display?
- ... only the lower horizontal segments light up in the display?
- ... the weighing result is unstable?
- ... the weighing result is obviously incorrect?
- ... only a portion of the display lights up?
- ... the middle horizontal segments in the display are blinking (for more than 30 sec)?
-